


# 0521FR Self Adhesive Breather Membrane Class B

#### Step 1

Ensure all ISM's are installed: Windows, Doors, Slab Edge etc.

### Step 2 (Horizontal Method)

For the horizontal method, install from the side of the façade section at the bottom, removing the release liner and adhering the membrane to the sheathing board as it is unrolled. Repeat this step until the façade is covered, overlapping the previous membrane by 100mm.

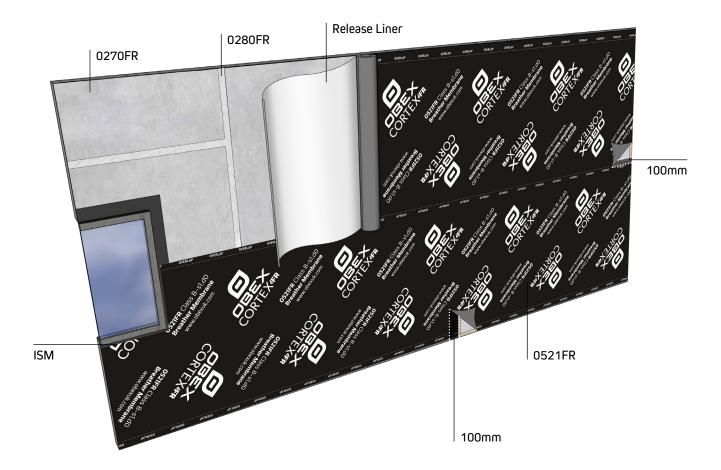




For more product information call us with your enquiry on 01905 337800, email info@obexuk.com or visit www.obexuk.com OBEX Protection Ltd. Unit 5, St. Modwen Park, Norton Road, Broomhall, Worcester, WR5 2QR.



# 0521FR Self Adhesive Breather Membrane Class B

### Step 2 (Vertical Method)

For the vertical method, install from the top of the facade downwards, removing the release liner and adhering the membrane to the sheathing board as it is unrolled. Repeat this step until the façade is covered, overlapping the previous membrane by 100mm.

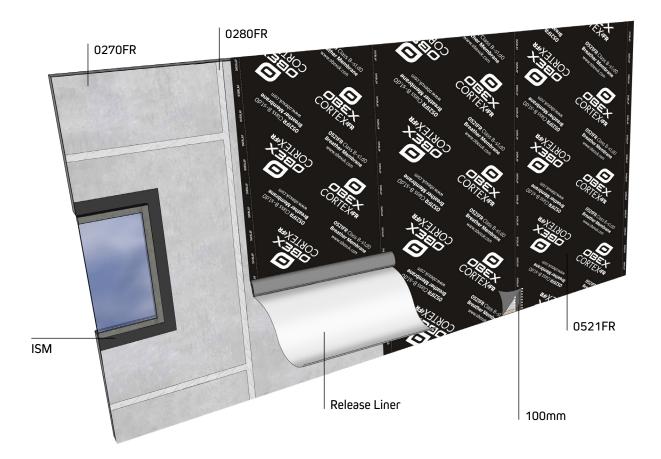

### Repair Guide

Damages are repaired with a patch of membrane which seals at least 50mm around the damaged area on all sides.



For more product information call us with your enquiry on 01905 337800, email info@obexuk.com or visit www.obexuk.com OBEX Protection Ltd. Unit 5, St. Modwen Park, Norton Road, Broomhall, Worcester, WR5 2QR.